
 


OPERATION MANUAL

ILLUSTRATION

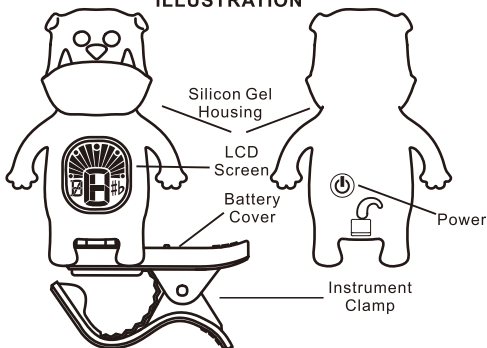

INSTALLING THE BATTERY ILLUSTRATION



1. Please open the battery cover , insert a CR2032 battery (attention "+" / "-" charges).
2. If the unit doesn't work , please take battery out and reinstall the battery.
3. When the screen become dark or tuning slowly , replaced a new battery in time.
4. Please do not arbitrarily discard the waste battery.

OPERATION

1. Press the power button and hold on to turn on (off) the tuner. Press the power button continuously to select tuning item out of Chromatic, Guitar, Bass, Ukulele and Violin.
2. Clip on strongest vibrating part of your instrument.
3. As soon as you play a note, the display will show the note name and string number you are playing.
Tuning Accuracy Indicator
Flat: the needle indicator is at the left part of the parameters, the LCD display is orange
Sharp: the needle indicator is at the right part of the parameters, the LCD display is orange
Tuned: the needle indicator is in the middle of the parameters, the LCD display is green
4. The unit will shut off automatically if there is no signal within 5 minutes.
5. the unit will self-motion memory last time your setting ,if reinstall the battery ,the unit automatically return to initial setting .

SPECIFICATIONS

Tuning : Chromatic, Guitar, Bass, Ukulele, Violin

Tuning way : Clip

Tuning range : A0(27.5Hz)~C8(4186Hz)

Precision : ± 1 cent

Power : 3V ,Battery (CR2032) $\times 1$

Dimension : 64mm \times 44mm \times 90mm (with clip)

Weight : 45.2g (with clip)

Accessories : Operation manual,
1 piece battery (CR2032)